



Overhead Door Company of Cedar Rapids & Iowa City

800-393-9976

*Always disconnect operator from door before programming
to avoid injury to yourself or the operator*



CHAMBERLAIN-LIFTMASTER 66LM & 976LM Wireless Keypad

1. Look for the antennae wire near the rear of the motor head, within about 2 inches of where the antennae wire disappears into the motor head there is a brightly colored button (the "SMART" button).
2. Press and release the "SMART" button.
3. Go to the keypad and press your 4 digit PIN number & "ENTER", "ENTER".

To remove old transmitter and/or keypad codes

1. Press and hold the SMART button until the small light goes out.
2. Try a transmitter to make sure the old code has been erased.
3. Press and release the "SMART" button on the back of the motor. Press the transmitter button twice (repeat this step for each additional transmitter or keypad).