

3. Enter the Default Access Code "1", "2", "3", "4", enter the radio code, then press the "RADIO LEARN" button - *the light will turn off.*
4. If code is entered incorrectly, the light will blink quickly..

To Select Access Code

1. Select a new four-digit access code.
2. Press the "ACCESS LEARN" button twice - *LED indicator light will blink slowly.*
3. Enter the Default Access Code "1", "2", "3", "4", enter the new four-digit access code, then press the "ACCESS LEARN" button - *the light will turn off.*
4. If code is entered incorrectly, the light will blink quickly.

IMPORTANT: Once you program your Access Code, this new code becomes your default access code for future programming.

To reset the Codekey Entry System to the factory programmed codes, remove the battery from the unit for approximately three minutes.