



## ***Overhead Door Company of Cedar Rapids & Iowa City*** **800-393-9976**

*Always disconnect operator from door before programming  
to avoid injury to yourself or the operator*

---

### **ALLSTAR/ALLISTER/PULSAR • Wireless Keypad**

1. Reset default setting by pressing "ON/RESET", then "9", "9", "9", "#", "9", "9", "9", "#".
2. Press "ON/RESET", "1", "2", "3", "4", "\*", "1".
3. Press "ON/RESET", "1", "2", "3", "4", "#", "1", enter your four-digit pin number, enter the pin number again, then press "#".
4. Determine your nine-digit door code by entering the switch positions from your transmitter (+ = 1, 0 = 2, - = 3).
5. Press "ON/RESET", enter your four-digit pin number, "#", "#", "1", the nine-digit door code, and "#".
6. To operate your door, press "ON/RESET", enter your four-digit pin number, "\*" and "1".

### **Multiple Doors**

1. Press "ON/RESET", enter your four-digit pin number, "\*", "2" for door number 2.
2. Press "ON/RESET", enter your four-digit pin number, "\*", "3" for door number 3.
3. Press "ON/RESET", enter your four-digit pin number, "\*", "4" for door number 4.
4. Find your door code by entering the switch positions from your transmitter (+ = 1, 0 = 2, - = 3).
5. Press "ON/RESET", enter your four-digit pin number, "#", "#", "2", the nine-digit door code, and "#".
6. To operate your door, press "ON/RESET", enter your four-digit pin number, "\*" and "2".

### **Multiple Pin Codes**

1. Enter your master four-digit pin number, "#", "2", enter your 2nd four-digit pin number, enter it again, then "#".
2. Enter your master four-digit pin number, "#", "3", enter your 3rd four-digit pin number, enter it again, then "#".
3. Enter your master four-digit pin number, "#", "4", enter your 4th four-digit pin number, enter it again, then "#".