

#### **Transmitter Switch Settings**

123	456	789	10 11 12
up	up	up	7
up	up	down	6
up	down	up	5
up	down	down	4
down	up	up	3
down	up	down	2
down	down	up	1
down	down	down	0
<b>Resulting Security Code</b>			

PLEASE NOTE:

DURING 2000, THE FACTORY MODIFIED THIS KEYPAD. IF THE KEYPAD DOES NOT WORK AFTER FOLLOWING THESE DIRECTIONS - TRY REPEATING THE DIRECTIONS BUT SKIP STEP #2



# Overhead Door Company of Cedar Rapids & Iowa city 800-393-9976

Always disconnect operator from door before programming to avoid injury to yourself or the operator

## **OVERHEAD DOOR • "G" Series Non-CodeDodger OR GENIE • Wireless (slide up cover)**

Battery: Access Panel is at the bottom edge of the keypad.

To Operate: Depress area and slide down. Light should come on when cover is raised.

### **Reset Keypad:**

- 1. Open cover on keypad just enough to press "#" & "8" at the same time. While pressing these keys, raise the cover all the way (*this erases the old code*). Release the buttons.
- 2. Close the cover. Open cover fully.
- 3. Press numbers "3", "5", "7", and "#". The red light should be blinking about once a second.
- 4. Enter your new PIN number and press #. The red light should be blinking faster.
- 5. Enter the security code number and press "\*"- red Light will turn off.
- 6. Close keypad cover fully.
- 7. Slide keypad cover open fully and enter the pin number and press "\*" to test with your new code number.

#### To Change Pin # Without Resetting Keypad:

- 1. Open cover fully.
- 2. Enter OLD pin number and press "#" red light will blink slowly.
- 3. Enter the NEW pin number and press "#" red light will blink faster.
- 4. Press "\*" red light will turn off.
- 5. Close keypad cover.
- 6. Slide keypad cover open fully and enter pin number and press "\*" to test with your new code number.

**NOTE:** On a 456 Operator, press the far right button in the cut-out area to program a new transmitter. *THIS IS FOR ''O-SERIES'' TRANSMITTERS ONLY*.